


## COMPONENT LOCATIONS

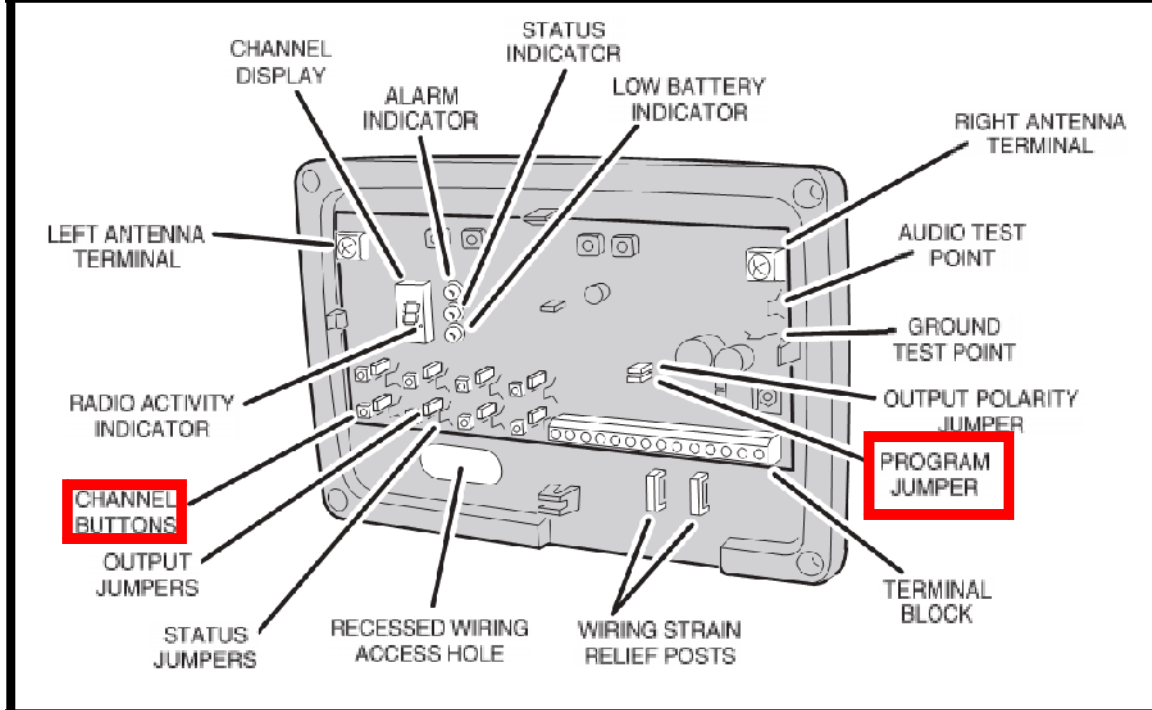

## PROGRAM REMOTE TO CHANNEL 1

### ADDING TRANSMITTERS

- REMOVE THE PROGRAM JUMPER, THE CHANNEL DISPLAY SHOWS "P"
- BRIEFLY PRESS THE BUTTON FOR THE CHANNEL THAT THE TRANSMITTER IS GOING TO BE ADDED INTO, THE CHANNEL NUMBER SHOWS ON THE DISPLAY
- YOU HAVE 5 SECONDS TO ACTIVATE THE TRANSMITTER, THE ALARM LED WILL BLINK
- AFTER THE TRANSMITTER IS ENTERED, OR AFTER 5 SECONDS, THE CHANNEL DISPLAY WILL RETURN TO "P"

REPEAT STEPS 2 & 3 FOR ADDITIONAL TRANSMITTERS (UP TO 32 TOTAL, WITH ANY MIX OF CHANNELS) THEN REPLACE PROGRAM JUMPER WHEN FINISHED

NOTE: ON MULTI-BUTTON TRANSMITTERS, EACH BUTTON HAS A UNIQUE CODE, AND IS ADDED TO THE RECEIVER SEPARATELY, INTO ANY CHANNEL